


## HARMONISER OPTION 2 VOICE FIX

### Digitech Model VR or ACCESS

(These models are either blue or silver in colour)

When changing from standard settings to Voice Fix it is necessary to adjust as follows:

LEAD LEVEL DOWN TO [30]

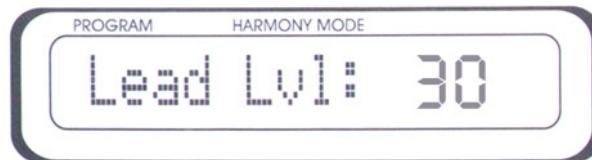

MIDI CHANNEL TO [16]



TRANSCOPE NEEDS REGULAR ADJUSTMENT DEPENDING ON SONG AND SINGER

#### NOTE:-

Lead level knob needs regular adjustment depending on singer's performance:  
(off = bad singer    30 = average singer    Up to max = good singer)

Transpose can be selected by pressing the Data entry Switch/knob until the LCD displays "TRANSCOPE", and can be adjusted to the correct settings by turning the Data entry Switch/knob.

Transpose needs regular adjustment to singer's voice dependent on tune:  
For a singer to sound like they have more bass adjust TRANSCOPE from 0 to -1

**OR**

For singer to sound like they have more treble adjust TRANSCOPE from 0 to +1

**To test use the following example songs:**

**My Heart Will Go On / Celine Dion the result should be:**

**0 Transpose man sounds like woman**

**-1 Transpose man sounds like a man**

**-2 Transpose man sounds very low (Satchmo / Robert Palmer)**

**+1 Transpose makes anyone sound like a "Dalek"**

## **Kwizoke – No Amplifier Model – Connections**

Karaoke Audio connects to auxiliary or line in on mixer desk/amp

Background Audio (voice) connects to auxiliary or line in on mixer desk/amp(remove karaoke audio)

Phono to jack lead connects to any available channel, for kwiz background jingles

To use digitech vocalist on more than 1 channel

- Jack lead (**black**) connects to **send** on mixer/amp
- Jack lead (**red**) connects to **return** on mixer/amp

To use Digitech vocalist on 1 microphone through canon on front panel.

- The send lead (black) must be disconnected from socket on rear of vocalist (directly behind canon socket on rear panel).
- Return lead can then be connected to any available channel on mixer desk/amplifier.

Note: Generally it is advisable to use F/X on 1 voice only to avoid disharmonies if singers become unsynchronised.